

Microwave-resistant plastic container	✓ x x x			
Kitchen roll	✓ x x x			
Metal sheet	x ✓ ✓ x			
Metal rack	x ✓ ✓ x			
Metal container	x ✓ ✓ x			
Aluminium foil and container	x ✓ ✓ x			

*both, Microwave+grill and microwave+hot air

15.4 Opening / closing door

◆ Open door

Push the door opener to open the door of the device. If the device is switched on, the current cooking programme will be interrupted.



HINWEIS

Please note

- ▶ Leave the door open for a moment before reaching into the cooking chamber, to allow the accumulated heat to escape.

◆ Close doors



Start / Quickstart

Close the door until the door latch audibly locks in place. If a current cooking programme was interrupted as a result of opening the door, the current cooking programme will be continued after pressing the button **Start/Quick Start**.

15.5 Switch on/off sound



Power / Sound

Press the button **power/sound** for three seconds in order to switch on or off the sound (beep tone).

You can hear messages of the programme ending and warning signals even if the sound has been switched off.

15.6 Activation after selecting the programme



Start / Quickstart

After selecting the program, press the button **Start /Quick start**, to start the preset cooking programme.

15.7 Quick start



Start / Quickstart

Utilise this function to programme the oven for comfortable cooking at 100% microwave performance. Press the **Start/Quick start** button in quick sequence to set the cooking time. If you press the button **Start/Quick** once, the oven will work for 30 sec., if you press it twice, it works for 1 min.

The oven starts automatically after 2 seconds. Once the end of the cooking time is reached, four signal tones will be emitted and **END** will appear in the display.

